

Getting Started

 


Remove shade from package. Save packaging until shade is installed and working to your satisfaction.

Tools:

- Level
- Measuring Tape
- Pencil
- Power drill (1/4" hex driver and drill bit)
- Screwdriver




Fasteners for different mounting surface:

Surface	Fastener
Wood	1 1/4" Screws (Provided) 
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provided) 
Metal	Sheet Metal Screws (Not Provided) 


Step 1: Bracket Installation

- Measure 3" from both ends of the head rail. Mark the bracket location on the mounting surface

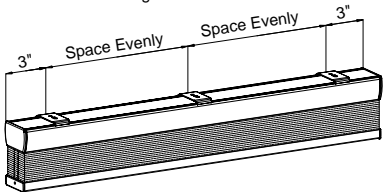

Inside Mount


- To ensure proper operation of the shade, please allocate a minimum distance of 2 5/8" with no obstruction from the edge of the wall and a minimum distance of 1 1/8" from the edge of the wall to the center of screw.

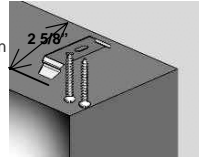

- Each bracket used for the same shade should be aligned to have the same installation depth.
- Secure each bracket to the top of the window frame with mounting screws.

Outside Mount

- Use level to align the brackets. Allocate a minimum distance of 1 1/8" from wall to the center of screw.

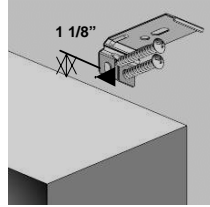


- Use mounting screws to secure each bracket.


Step 2: Shade Installation

- Position head rail at an angle so that it is hooked to the front of the bracket. Then push it upward to snap into the bracket.


△ For proper installation, start with attaching the front rail to the bracket.

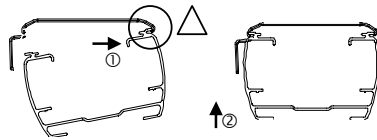

 Step 3: Shade Operation



 
To lower the shade, gently pull the bottom rail down and stop at the desired height.



To raise the shade, gently raise the shade to desired height.


How to Install Hold-Down Brackets (optional)

- Use 3/4" screw to secure each bracket.

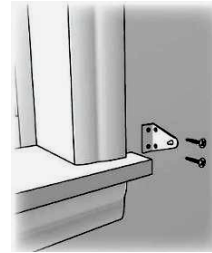


Remove the Shade

- Fully raise the shade.
- Gently pry the bracket off the head rail with a flat screwdriver.
- Remove the shade.

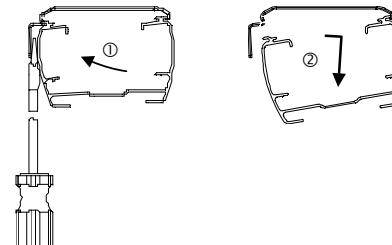


How to Install & Remove Shade Handle (optional)

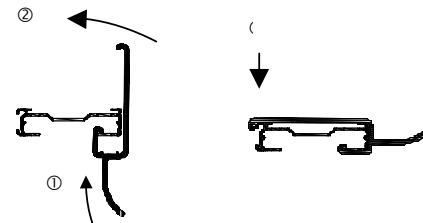

To install the handle, place handle to bottom rail. Flip over and snap into the groove of the rail.

To remove handle, hold the bottom rail, detach handle from rail and flip over.

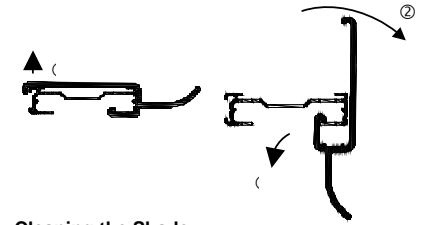

Cleaning the Shade

Routine cleaning will help maintain the beauty of your shades. To care for your shades use any of the following options:

- **Dusting**
Regularly dust the shade with a duster. In most situations this is the only cleaning method needed.
- **Vacuuming**
Use a hand-held vacuum on low suction setting to remove dust.
- **Spot-Cleaning**
Dampen a clean cloth with warm water and mild detergent solution and then dab the spot until stain is gone. Do not rub! Allow the fabric to dry in a fully lowered shade position.

Troubleshooting

Problem	Solution
The shade will not snap into the mounting brackets	Check if mounting brackets are aligned. Refer to Step 1.
The shade will not lift	Gently pull down on the bottom rail to reactivate the cordless mechanism. Repeat if necessary.

