


## How to Install Custom Vertical Valance

### VALANCE STYLES

The following illustrations show installed examples of some common valance styles. Refer to the installation that matches your valance.

DesignLine™ Valance



Traditional Valance



Transitional Valance



Visions™ Faux Wood Valance



### BEFORE YOU BEGIN:

Please refer to the illustrated examples to determine which clips and instructions you will need.

Twist-lock Valance Clips

Twist-Lock Valance Clips

DesignLine™, Traditional,  
and Transitional



Visions™ Valance Clips

Visions™ Valance Clips

Visions™ Faux Wood





### INSTALLING VALANCE CLIPS

#### STEP A

Install the valance clips — DesignLine™, Traditional and Transitional (outside-mount)


- **NOTE:** Headrail mounting shown in installed position to show typical mounting bracket locations.
- Position one clip at each end of the headrail next to the headrail mounting bracket locations. Make sure that the clips do not interfere with the mounting brackets.
- Lower the clip into the top channel of the headrail at 45° angle to the headrail so the locking tabs fit into the channel.
- Rotate the clip in the channel so that it locks into place.
- Space remaining clips evenly between the ends, not more than 30" apart.

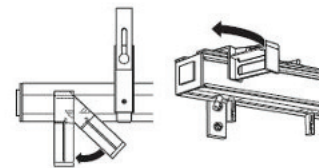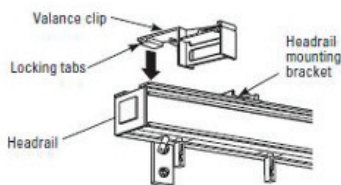

#### STEP B

Install the valance clips — DesignLine™, Traditional and Transitional (inside-mount)

- **NOTE: Valance clips must be installed prior to headrail installation.**
- Position one clip at each end of the headrail, next to the headrail mounting bracket locations. Make sure that the clips do not interfere with the mounting brackets.
- Lower the clip into the top channel of the headrail at a 45° angle to the headrail so the locking tabs fit into the channel.
- Rotate the clip in the channel so that it locks into place.

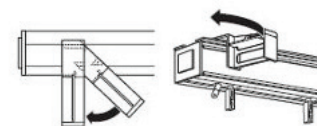


## DESIGNLINE™ OUTSIDE- AND INSIDE-MOUNT INSTALLATION

### TAILORED EDGE

#### STEP 1

Attach the valance to the headrail


- Center the front panel with the headrail.
- Slide the mounting tab on the front valance panel into the valance clips until they click into place.

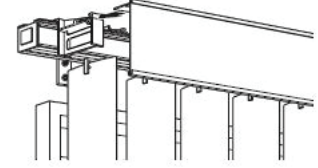

#### STEP 2

Assemble the returns (outside-mount)

- Slide the end of the return into the pocket of the corner clip, as shown.
- Slide the corner clip onto the end of the front panel. The top notch will slide over the mounting tab; the lower lip on the bottom notch will slide into the channel on the back of the lower front panel trim.
- Repeat for the other return.

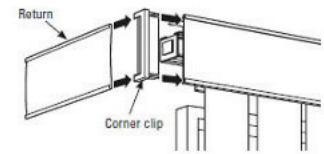


### ROUND EDGE

#### STEP 1

Attach the valance to the headrail


- Center the front panel with the headrail.
- Slide the mounting tab on the front valance panel into the valance clips until they click into place.

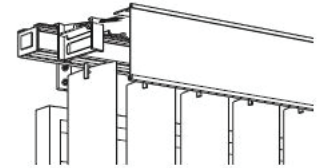

#### STEP 2

Attach the returns (outside-mount)

- Slide the end of the return into the pocket of the corner clip, as shown.
- Slide the corner clip onto the end of the front panel. The top notch will slide over the mounting tab; the lower lip on the bottom notch will slide into the channel on the back of the lower front panel trim.
- Repeat for the other return.

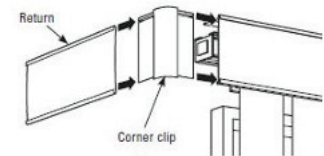

---


## TRADITIONAL VALANCE INSTALLATION

---

### STEP 1A

Attach the valance to the headrail (outside-mount)


- Center the front panel with the headrail.
- Slide the mounting tab on the front valance panel into the valance clips until they click into place.

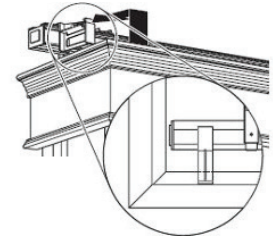

### STEP 1B

Attach the valance to the headrail (inside-mount)

- Center the front panel with the headrail.
- Slide the mounting tab on the front valance panel into the valance clips until they click into place.

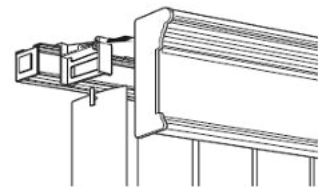

---


## TRANSITIONAL VALANCE INSTALLATION

---

### STEP 1A

Attach the valance to the headrail (outside-mount)


- Center the front panel with the headrail.
- Slide the mounting tab on the front valance panel into the valance clips until they click into place.

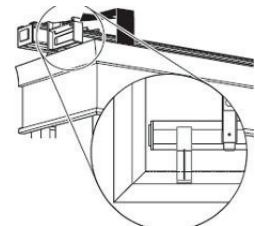

### STEP 1B

Attach the valance to the headrail (inside-mount)

- Center the front panel with the headrail.
- Slide the mounting tab on the front valance panel into the valance clips until they click into place.

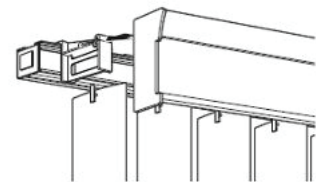


## VISIONS™ VALANCE INSTALLATION

### STEP 1

Install the clips on the valance


- Install a valance clip about 2" in from each end. Space any remaining clips evenly along the length of the valance.
- Insert the clip into the groove on the back side of the valance and then rotate the clip 90°.

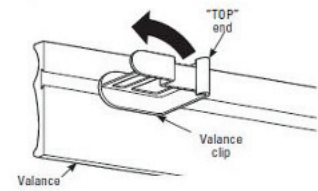

### STEP 2

Attach the valance to the headrail

- Hook the valance clips onto the front of the headrail. Make sure the hooks fit over the lip of the channel as shown.

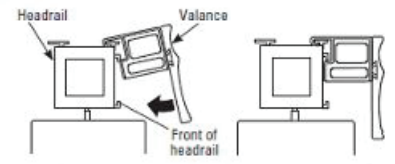

### STEP 3

Attach the returns (outside-mount)

- Slide a return "L" bracket into the angled end of each return.
- Press the returns into place on each end of the valance.

