


N300479
65101-11731

Installation Instructions Honeycomb Shades Special Shapes


Perfect Arch




Elongated Eyebrow

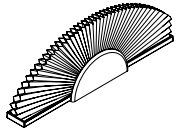


Eyebrow

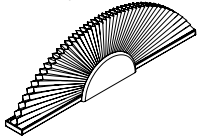


Triangle

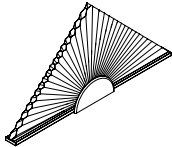



Quarter Round L / R

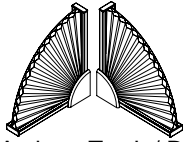


Arch on Top L / R

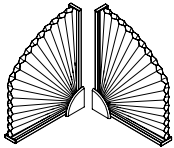


Half Eyebrow L/R

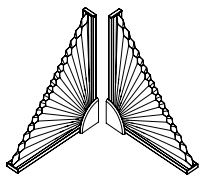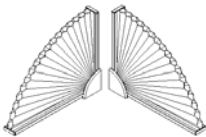


Check Component/Hardware:



for 3/8" D



for 3/8" S
Installation Bracket



for 3/4" S



Bracket Clip




180°Center
Template



90°Center
Template



90°Center
Support



180°Center
Support

Hardware Standard Quantity

For perfect arch, Eyebrow, Elongated Eyebrow, and Triangle:

Order Width (X)	X 48"	X > 48"
Installation Bracket	2	4
Bracket Clip (for perfect arch, Eyebrow, Elongated Eyebrow)	4	6
Bracket Clip (Triangle)	6	8
1 1/4" Screw for Installation Bracket	Installation bracket qty x 2	
3/4" Screw for Bracket Clip	Bracket Clip qty	

For Quarter Round, Half Eyebrow, Arch on Top, and Angle Top:

Order Width (X)	X 24"	X > 24"
Installation Bracket	2	4
Bracket Clip (Quarter Round, Half Eyebrow, Arch on Top)	2	4
Bracket Clip (Angle Top)	4	6
1 1/4" Screw for Installation Bracket	Installation bracket qty x 2	
3/4" Screw for Bracket Clip	Bracket Clip qty	

Step1: Getting Started

Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

Tools Needed :

- Power drill and drill bit
- Measuring tape
- Screwdriver
- Level
- Pencil




You will need to use the following fasteners for your particular mounting surface.


Surface	Fastener
Wood	#8x1 1/4" Screws (Provide)
	#6x3/4" Screws (Provide)
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provide)
Metal	Sheet Metal Screws (Not Provide)

Step2: Assemble the Shade

For Perfect Arch, Eyebrow, Elongated Eyebrow, and Triangle (take Perfect Arch as example): Open the shade and place the rail into the bottom of 180°center support tightly, and then install the front and back 180°center templates:

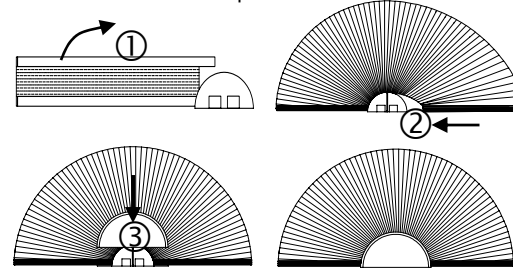

For Quarter Round, Arch on Top, Angle Top, and Half Eyebrow (take Quarter Round as example): Open the shade and place the rail into the bottom of 90°center support tightly, and then install the front and back 90°center templates:

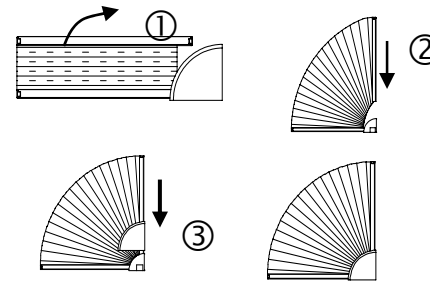


Step3: Install the Bracket


Mark the bracket location on the mounting surface as shown in the following illustrations.

For Perfect Arch, Elongated Eyebrow, and Triangle (take Perfect Arch as example):

For shade width X 48", measure 1.5" (38mm) from both ends of the rail to locate the center of the bracket

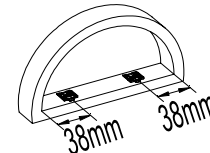


For shade width X >48", place the bracket evenly along the rail

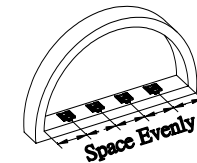


For Quarter Round, Arch on Top, Angle Top, and Half Eyebrow (take Quarter Round as example):

For shade width X 24", measure 1.5" (38mm) from both ends of the rail to locate the center of the bracket

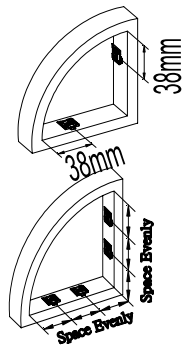

For shade width X >24", place the bracket evenly along the rail

Use two #8x1 1/4" screws to attach the installation brackets on the window frame. The min. distance is 11/16" from the front bracket to the edge of window frame.


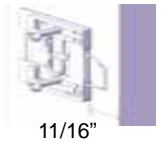


Step 4: Install the Screws for Bracket Clip
Mark the bracket clip location on the mounting surface as shown in the following pictures:

Perfect Arch & Eyebrow
Shade width X 48" Shade width X >48"






Elongated Eyebrow
Shade width X 48" Shade width X >48"

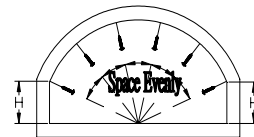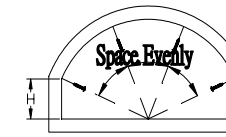



⚠ The Bracket clip screw should be installed on the curve, not on the leg (H).

Triangle
Shade width X 48" Shade width X >48"

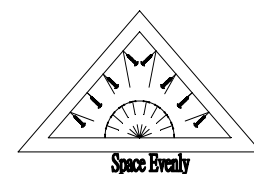

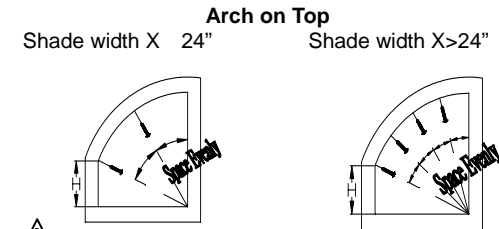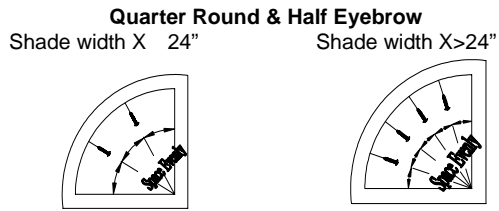

The Bracket clip screw should be installed on the curve, not on the leg (H).

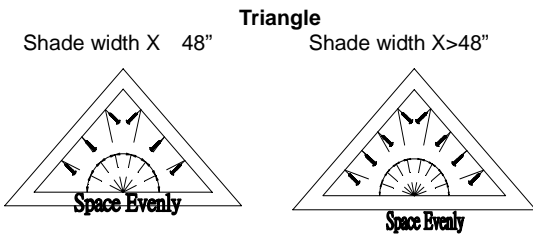
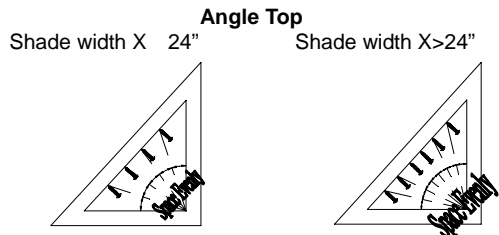


Install a #6x3/4" screw into the corresponding location of the bracket clip about 1 1/8" distance from the front window frame (do not drive the screw completely in and leave around 2mm gap to insert Bracket Clip)




Step5: Install the Bracket Clip


Insert the Bracket Clip into fabric and then close the Bracket Clip to keep it clamped on the fabric.

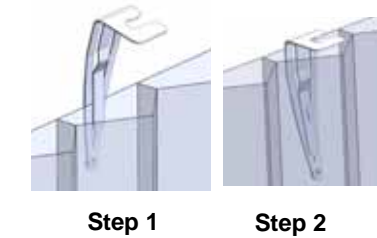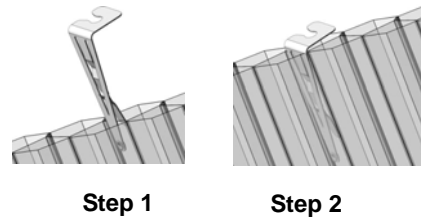


Bracket Clip open and close illustration:

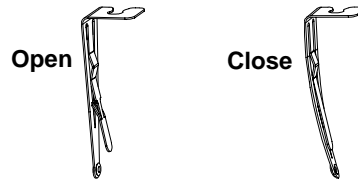


Step6: Install the Shade

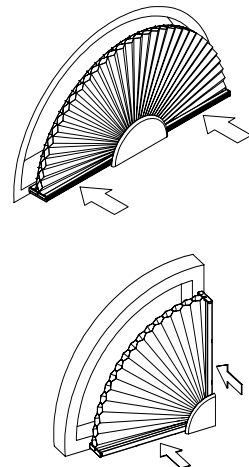

Place the front groove of the rail into the front iron wire of the bracket and then push forward to make the back groove of the rail snap into the back groove of the bracket.

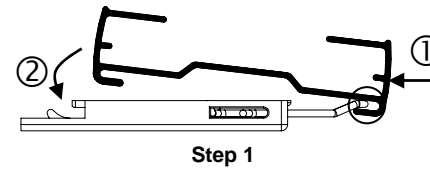


Insert the Bracket Clip into the screw from the notch.

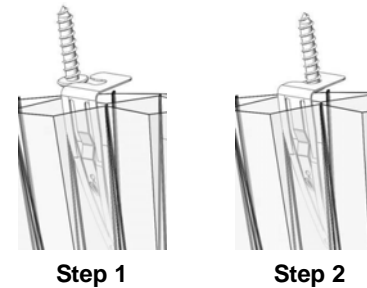

Remove the Shade

1. Take off the Bracket Clip from the screw.
2. Backward the rail from the front and then force the rail up from the back.

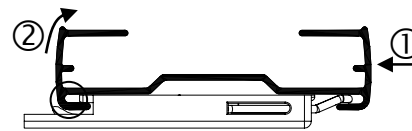

Cleaning

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid), or dampen a clean cloth with a warm water and mild detergent solution to dab the spot until it's gone (do not rub!).